

Ultra Entry Door

Installation Instructions



Important

Read these instructions completely before you begin installation. Always think "Safety First". Use the proper tools and always wear safety glasses to protect your eyes.

Required Tools

Tape Measure

Hammer

Framing Square

Quality Exterior Grade Caulk

Wood Shims Level 8p Finish Nails Drill/Screwdriver

1/8" Drill Bit

Installation Screw Pack

These instructions apply to the following Door Systems:











French & Patio Units


Installation Checklist

- Clean, dry, level, and solid subfloor (1)
- Three beads of caulk under the Sill (2)
- Ensure consistent margins (5)
- Steel Door Adjustable Hinge (8)
- Adjust Sill, Check Corner Pads (9)
- Caulk corner of Sill and Jamb (10)
- Position & Install Astragal (French) (11)
- Caulk around door unit and use flashing (11)

Preparing the Rough Opening


? Are the walls straight? ? Are the studs plumb and level?


Is the subfloor clean, dry, level

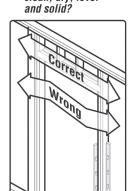


If you are using a height plate to bring the sill up to the level of the finished floor coverina:

Be sure that it is at least as wide as the sill and as long as the rough opening.

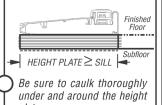

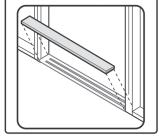

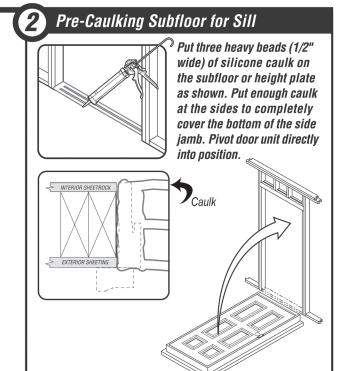

4 Shim to Ensure Consistent Margins

at each corner to center and ⇒□ || || || || || || ||

Adjust the frame so it is flush →□

frame should be 1/8" on top and strike side.

Wedge shims on the bottom

stabilize the unit. Continue

placing shims up each side of

the unit as shown. Make sure

the jambs remain square and

Margins between door and

vertical as you go.

with the face of the door.

Check hinge jamb for plumb and true with a 6-foot level.

Position Unit in Rough Opening

Temporarily tack the door in place with the finish nails provided. DO NOT FULLY SEAT.



Check both sides



Assure that back

exterior sheeting


is up against







French & Patio Units: Fasten Jamb on fixed or passive side of door

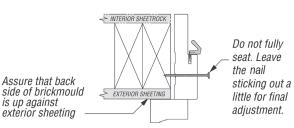



IMPORTANT: Shims must be placed behind the jamb at each hinge, latch and deadbolt location. Use the 3" open hole in each hinge. If a dead bolt is being installed. use two 3" screws through the dead bolt strike plate, or through the jamb next to the strike plate. All screws must pass through the jamb and shims, and into the stud.

SAFETY

- Do not work alone. Two or more people may be required.
- Use safety lifting techniques.
- Use caution when handling glass. Broken or cracked glass can cause serious injury.
- Use proper protective gear (gloves, safety glasses, ear protection, etc.)
- Use power tools safely following manufacturer operating instructions.
- Use caution when working on ladders or at elevated heights.
- Take proper precaution if lead paint is suspected (commonly used prior to 1979). Information regarding regulations and lead protection can be found at www.epa.gov/lead

MATERIAL & HANDLING

- Handle in a vertical position. Do not carry flat or drag on the floor.
- Do not put stress on joints, corners, or frames
- Store door in dry, well-ventilated area in vertical, leaning position. Do not stack horizontally.

DISPOSAL & RECYCLING

Most Construction & Demolition (C&D) debris is nonhazardous and is not regulated by EPA. Many states have specific definitions of C&D debris that effectively determine what materials are allowed to be disposed of in nonhazardous waste landfills and C&D landfills. Even if federal or state regulations do not apply to your business, you should make efforts to keep the hazardous components of the wastes you generate out of landfills to conserve natural resources and protect human health and the environment. Suggestions outlines at the following link:

www.epa.gov/osw/inforesources/pubs/infocus/rif-cd.pdf identify steps you can take to reduce, reuse, and recycle vour waste.



Manufactured by: Polaris Windows and Doors 500 Victoria Rd. • Austintown, Ohio 44515 www.polariswindows.com


Simple Solution® is a registered trademark of Endura Products, Inc.

Storm Door Prep


Pre-Drill Qty 6, 3/16" Diameter Holes 1 1/8" deep, 3/8" from the edge of the Brick Mold, through the Hinge Side and Strike Side Brickmolds at the dimensions specified.

Use the supplied $\#8 \times 2 \ 1/2$ Screws to secure the Brickmold in place prior to Storm Door Installation.

Install the Storm Door onto the secured brickmold per manufacturers instructions.

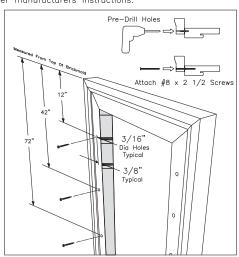



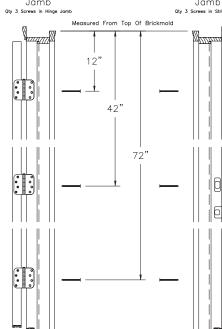


Secure with Fasteners

Pre-drill 1/8" pilot holes at each shim location. The screws that don't go through a hinge or strike plate can be hidden behind the weather-stripping.

Use the 2.5" installation screws to fasten the door frame to the opening. Min. four (4) screws for each side are recommended. The excess shim may be cut away with a saw or utility knife.

Check the weatherstripping contact for even compression all around the door.

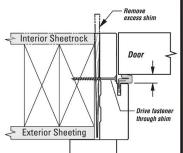


Lockset Hardware

Olnstall lockset hardware.


With door closed, shim behind latch area to maintain proper margins.



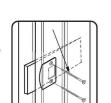


Fastening Header


Fasten through thick part of header. Use shim at each location indicated (X) to maintain proper margin.

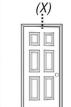




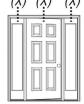

Sinale & Double Continuous Sidelite Units

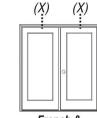

French & Patio Units

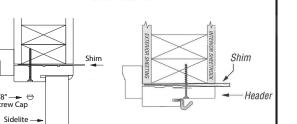


Steel Door Adjustable Hinge


Check fit of weather strip

Steel doors come with a patented adjustable hinge plate system. This is for fine tune adiustment of the slab within the frame.

Close the door and check to see that the bottom weather-strip makes an airtight seal along the entire length of the threshold. If the door needs adjustment, loosen the screws on the appropriate door side hinge leaf. With the adjustable hinges loosened, the door can be moved in or out 1/8" and up or down 3/8". Adjust the door as needed, then re-tighten the hinge screws and re-check the door for a good airtight seal. Check the bottom seal by closing the door and looking to see if any indicated in chart below. daylight appears along the bottom edge.

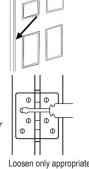

door side screws as Avoid VERY IMPORTANT: Make sure the

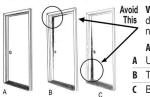


This door system is completely plumb: not twisted or bowed in the opening.

ADJUSTMENT	LOOSEN HINGES
Up/Down	all three
Top In/Out	center & upper
Bottom In/Out	center & lower


Adjust Sill and Check Corner Pads


If necessary, adjust the sill cap to ensure consistent spacing between panel and

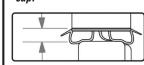

Verify proper installation of Simple Solution® Corner Pads. The raised fin of the corner pad needs to be tucked behind the weatherstrip as shown. (Both strike and hinge sides.)

The Simple Solution Corner Pad must also contact the top surface of the sill cap.

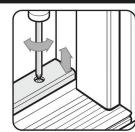

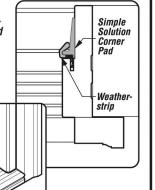

Caulking Sill


Caulk must be applied to the intersection of the aluminum sill extrusion and the jamb.


Seal front bottom edge of sill.


the mull and the door sill.




If a sill extender is installed. apply a bead of caulk where the extender meets the sill.

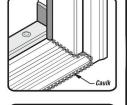

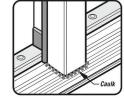


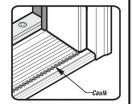

Astragal Positioning (French)

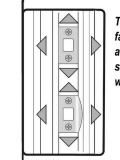

The strikes should be adjusted as far in the direction of door closure as possible to assure that the strikes pull the door up to the weatherstrip tightly.

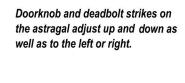

Finishing Instructions

If you did not order your door with a factory applied finish, the door should be finished immediately after installation.

Please refer to the finishing instructions for printing and staining included separately.

Doors not finished within 30 days from installation will void all warranties.